



IntelligentAg™

Quick Reference Guide - Understanding the Blockage Screen

RECON SPREADSENSE®

Alarm Notification

Indicates a blockage, mass flow out of range, or offline ECU.

Documentation


Access operator's guide, installation manual, and other documentation.

Settings

Set alarms, view diagnostic information, and edit ECU configuration.

Run Status

Flip card for more information on run status.

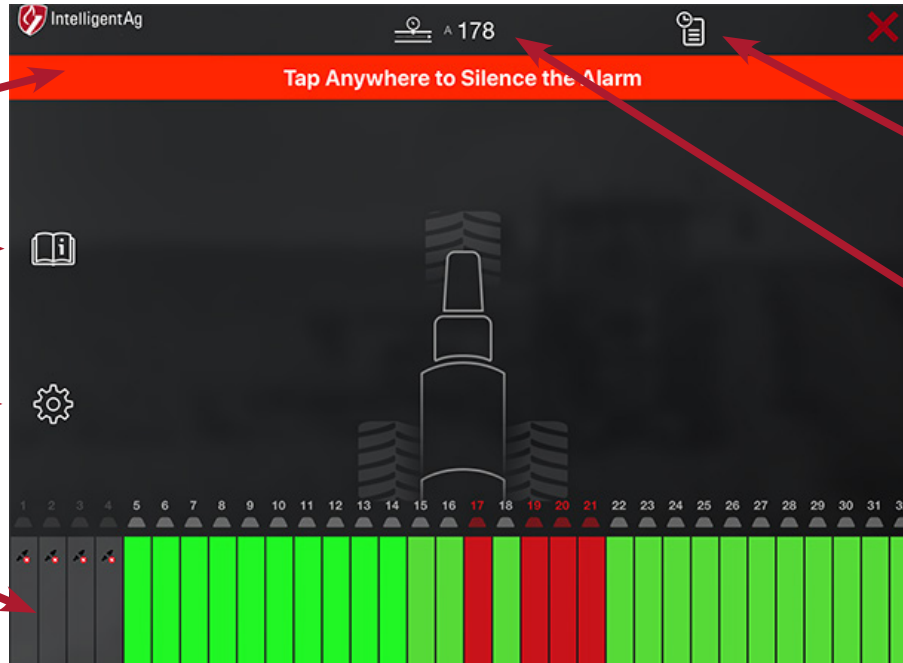

Exit Application

Close the app.

Blockage History

Shows recently detected blockages. Blockages that are currently active are in black text.

Mass Flow Rate

Measures product flow throughout the entire system. The mass flow rate is an arbitrary number and does not correspond to a specific unit of measurement. This number changes with changes in ground speed, product type, and application rates.



ECU for run is not communicating with the system. Ensure that it is still connected.

Run turned off due to section control.

Blockage detected on run.

No blockages detected on run.

